



Meaco AirVax 33X2 Air Purifier Instruction Manual




AIRVAX 33X2


Please read this instruction manual before using the air purifier and keep safe for future reference.

PART NAMES AND SETUP

1. MAIN UNIT

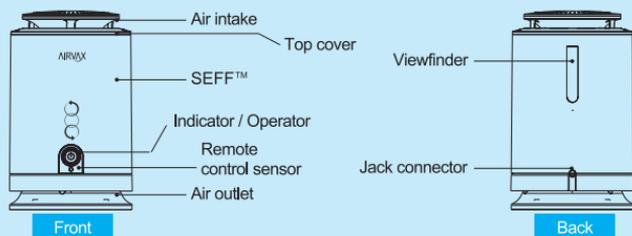

2. ACCESSORIES

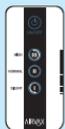

Remote control



Lithium battery (CR2025)



Adaptor(1.0 A)
AC 110-240V/DC12V AC-DC



Manual

<p>Unseal the box and carefully remove the Airvax.</p>	<p>Place the Airvax on a flat surface, clear of any obstructions.</p>	<p>Open the battery hatch on the remote control as shown.</p>
<p>Insert the battery negative side down (Lithium battery CR2025).</p>	<p>Close the battery hatch.</p>	<p>Turn the Airvax on using the remote control or the On/Off button.</p>

SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

WARNING - This appliance is intended for use in a domestic environment only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to person or property.

When using electrical appliances, basic safety precautions should always be followed:

1. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. Return to an authorized service facility for examination and repair.
2. This unit should always be kept in an upright position to avoid any damage. Locate the unit on a flat stable surface.
3. Check the household voltage to ensure it matches the units rated specification before operating.
4. Operate this unit in an ambient temperature between -10°C and 70°C.
5. Ensure that the air inlets and outlets are not blocked or covered. Fabrics might become dirty if they are too close to the air purifier.
6. Allow a distance of at least 2m away from equipment generating electric waves such as televisions and radios to avoid electronic interference.
7. Never move the air purifier by holding it by the top cover.
8. Never place anything on top of the unit and do not cover with any kind of material while in use.
9. This product is intended for domestic and light office use ONLY and not for commercial, industrial or outdoor use.
10. To protect against electrical shocks, do not immerse unit, plug or cord in water, or spray with liquids.
11. Never unplug the air purifier without pressing the "ON/OFF" button first or switching it off via the remote control, as this could damage the unit.
12. Always unplug the unit when not in use or moving location. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
13. Never use the unit where there are oil ingredients such as cooking oil in the air as the surface of the unit may crack.
14. Close supervision is necessary when any appliance is used by or near children and pets.
15. Do not run power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may be tripped over.
16. Never operate or store the unit in direct sunlight.
17. To repair the unit, take it to a qualified service engineer. Repairs carried out by unqualified people may cause damage to the unit or injury to persons or property and may void the warranty.
18. Where possible, avoid the use of an extension cable as they may overheat and cause a risk of fire. Only use an extension cord after ensuring it is in perfect condition.
19. Do not try and wash the filter using water as this will damage the filter and reduce its air purification properties.

PLUG DETAILS

This power supply changes mains alternating current to touch safe low voltage. In the event that the power supply is equipped with a voltage selector this should be checked to ensure that it is correctly positioned before use.

The power supply is only designed for indoor use and should not come into contact with water or dust. To prevent overheating the power supply should not be covered when it is in use.

The mains socket should be easily accessible. In the event of operational error, the plug should be immediately removed from the socket. The power supply is started up when the plug is inserted in the socket. To turn off the power supply, the plug should be removed from the socket. In the event that the power supply is equipped with a mains cable, ensure that the cable is not damaged. In the event that the mains cable becomes damaged, then the power supply should not be used.

The power supply contains dangerous voltages and the cover should not be removed. All service or maintenance work should be carried out by qualified personnel. You can get assistance by contacting Meaco (U.K.) Limited.

A fuse protects the power supply against short circuiting and overloading. In the event that the fuse needs to be replaced, the same type and size of fuse should always be used.



In the event that the power supply has this symbol on it, it is double insulated (in insulation class II). In the event that the power supply does not carry this symbol, it falls into insulation class I. If a power supply in insulation class I is connected to a wide communications network, then it should be connected to an earthed socket.

The power supply can also be connected to a mains supply, type IT. In the event that the power supply is labeled “EN60601-1” it complies with the requirements of electro-medical equipment and can be used in the vicinity of flammable anesthesia gases.

If the power supply has a plastic casing, avoid it coming into contact with oils, grease etc, as most types of plastic can be broken down by chemicals and solvents.

For technical specifications please see product labeling.


OPERATION

Place the air purifier on a flat surface clear of anything that can block its air flow.

Operation via the buttons on the Air Purifier itself.

Button Click	Mode	Effect
Once	Normal Mode	The unit turns on and the air purifier operates at MEDIUM fan speed. The two lights at the bottom of the LED will be turned on.
Twice	High Mode	The air purifier operates at HIGH fan speed. The three lights at the bottom of the LED will be turned on.
Three times	Silent Mode	The air purifier operates at LOW fan speed. The one light at the top of the LED will be turned on.
Four times	Off	Power is turned off and the LED will be turned off.

Operation via the remote control.

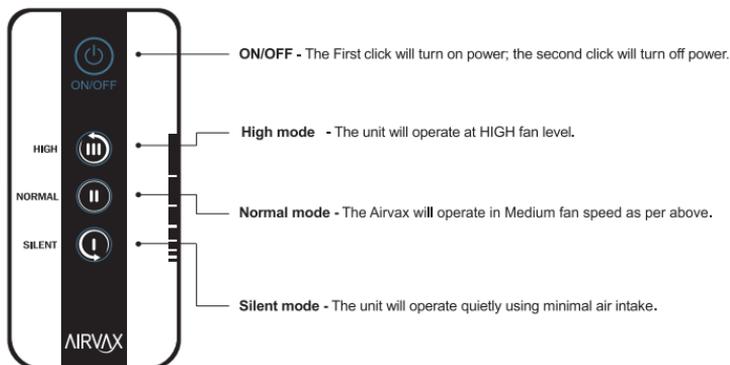

FILTER GUIDELINES AND CLEANING

Do not try and smell the filter and avoid the filter coming into contact with your skin.

Do not wash the filter; instead clean it using a vacuum cleaner following the instructions below.

To prevent dirt or stains appearing on the main body of the Airvax then clean as often as required using a soft, dry cloth. For stubborn stains use a soft cloth that has been soaked in warm water and squeezed of any excess water.

Do not use anything other than a slightly damp soft cloth on the Airvax.

Keep the Airvax dry and away from excess moisture.

			
<p>If the filter looks dirty through the viewfinder then you can clean it.</p>	<p>Turn off the power and unplug the power supply from the wall socket.</p>	<p>Open the Airvax by turning the cover in the direction of the 'Open' arrows.</p>	<p>Use a vacuum cleaner to remove the particles from the upper filter.</p>
		<p>Schedule of filter change. The SEFF (Static Electricity Film Filter) in the Airvax can be reused after cleaning with a vacuum cleaner. This process can be repeated numerous times but eventually the filter will become severely discoloured and will need to be replaced. This change should happen at least once every three years.</p>	
<p>Replace the lid by twisting the cover until it is locked into place.</p>	<p>Plug the power supply back in and turn the unit back on.</p>		



Never use the device without the air filter.

STORAGE

If the machine is not used for a long period of time, take the following steps:

1. Remove the plug from the socket
2. Clean the air filter.
3. Store the device in a dust-free location away from direct sunlight, preferably covered with a sheet of plastic.

TROUBLESHOOTING

Check the following before contacting technical support:

Problem	Cause	Solution
The unit does not work.	The power is not connected.	Insert the plug into the wall outlet.
The Remote Control does not work.	The lithium battery is completely discharged.	Replace the lithium battery (CR2025).
Operation noise is loud.	The filter is block with pollutants.	Clean the filter.

CONDITIONS OF WARRANTY

There is a one year warranty on your air purifier from the date of purchase.

All material or manufacturing defects will be repaired free of charge.

The following applies:

- Any repairs or replacement of components during the warranty period will not result in an extension of the warranty period.
- The warranty will expire if any alterations have been made, non-approved components have been fitted or if the air purifier has been repaired by a third party.
- Components subject to normal wear and tear, such as the air filter, are not covered by the warranty.
- The warranty is only valid on presentation of the original, unaltered, and date-stamped purchase receipt.
- The fan motor and fan blades can be damaged if the filter is blocked due to it not being cleaned. Damage to the fan motor and/or blades in this manner is not covered by the warranty.
- The warranty does not cover damage caused by actions that deviate from those as described in the user's manual or by neglect.
- The Airvax must be suitably packed for return to us. Damage in transit caused by poor packaging may be chargeable.
- All claims for compensation, including consequential damage, will not be entertained.

To prevent unnecessary expenses, we recommend that you always carefully read the user's manual first. If this does not provide a solution, then call Meaco (U.K.) Limited on 01483 234900 or email us via customerservice@meaco.com.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

CUSTOMER SERVICE

This air purifier has been imported into the U.K. by;

Meaco (U.K.) Limited
Meaco House
Parklands
Railton Road
Guildford
GU2 9JX

Telephone: Freecall 0500 418458
Email: sales@meaco.com
Website: www.meaco.com
Fax: 01483 232700

Please record, for future reference, your date of purchase and where you bought the air purifier from here.

Date of purchase.....

Purchased from www.meaco.com (if not then please record the supplier's name below).

.....

Meaco are specialists in air purifiers and would welcome your comments and questions on this air purifier. If you do develop a fault within the first year then please do call us and if we cannot fix the problem over the phone we will be happy to collect the air purifier from you at our expense and repair or replace as appropriate.

Please save the box just in case this happens.

TECHNICAL SPECIFICATIONS

Model	Meaco AirVax 33X2 air purifier		
Power supply	Input: AC 100~240V / 50~60HZ Output: DC 12V / 1.0A		
Fan modes	High mode	Normal mode	Quiet mode
Consumption	5.1W	3.9W	2.9W
Airflow CFM (m ³ /minute)	80(31.4)	62(24.4)	41(16.1)
Floor area	269ft ² or 25m ² (at maximum fan speed)		
Mains lead length	1.8m		
Dimensions	177 x 177 x 292mm (WDH)		
Weight	1.7Kg		



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

